Holzkraft Bandsaw




- Max width of parts: 34 cm
- Max height of parts: 20 cm
- Minimal cutting radius: 12mm (depending on blade)
- Woods, plastics and foams only

Make sure to...

- Never touch the saw blade
- Always guide your part with both hands
- Do not cut cylindrical stock, for doing so contact your Manager
- Never open the casing or adjust settings
- Always keep your hands in save distance of the blade, use a scrap part for guidance if needed
- No measuring or marking when machine is running
- Only clean the machine when turned off
- Never change the safety systems

Safety Rules



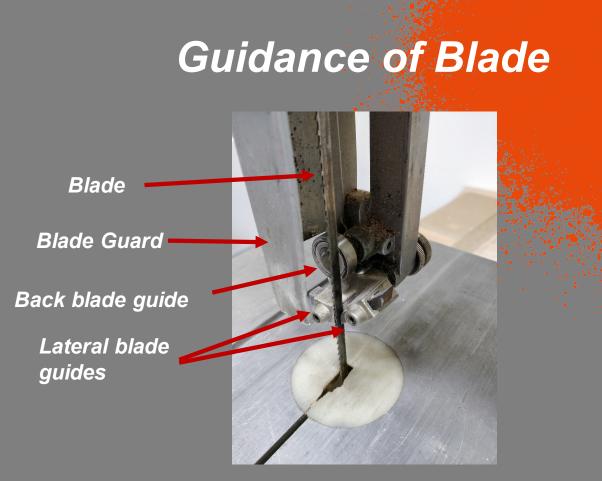

Guidance of parts



The push guide can be used to cut parts flat perpendicular to saw.

Or to cut a specific angle using the adjustment screw.


It's a good way to keep your finger clear of the blade.



Guidance of Blade

It is important that you always keep your fingers outside this indicated triangle.

If needed use a piece of scrap to push your part.

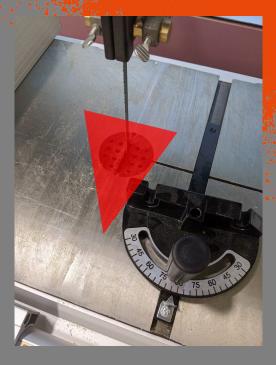

Blade Guard



The blade guard can be adjusted on the right.

Always have the guard set to a hight of 5-10 mm above your workpiece.

This will increase safety and quality of your work.

How to cut at an angle

By adjusting the angle of the table cuts at an angle can be made.

- Caution! Be careful the push guide is not getting in the way of cutting.
- Set the table back to 0° tilt after use.





- Safety goggles
- No baggy clothing
- No open hair
- No jewelry
- Including watches and rings
- No gloves

Make sure to...

- Never touch the saw blade
- Always guide your part with both hands
- Do not cut cylindrical stock, for doing so contact your Manager
- Never open the casing or adjust settings
- Always keep your hands in save distance of the blade, use a scrap part for guidance if needed
- No measuring or marking when machine is running
- Only clean the machine when turned off
- Never change the safety systems