

# WOODCRAFT BANDSAW

**Max width of parts: 34 cm**

**Max height of parts: 20 cm**

**Minimal cutting radius: 12mm (depending on blade)**

**Woods, plastics and foams only**



# SAFETY RULES

## Behaviour


- Never touch the saw blade
- Always guide your part with both hands
- Do not cut cylindrical stock, for doing so contact your Manager
- Never open the casing or adjust settings
- Always keep your hands in safe distance of the blade, use a scrap part for guidance if needed
- No measuring or marking when machine is running
- Only clean the machine when turned off
- Never change the safety systems

## Equipment

- Safety goggles
- No baggy clothing
- No open hair
- No jewelry (Including watches and rings)
- No gloves




# TERMS MACHINE

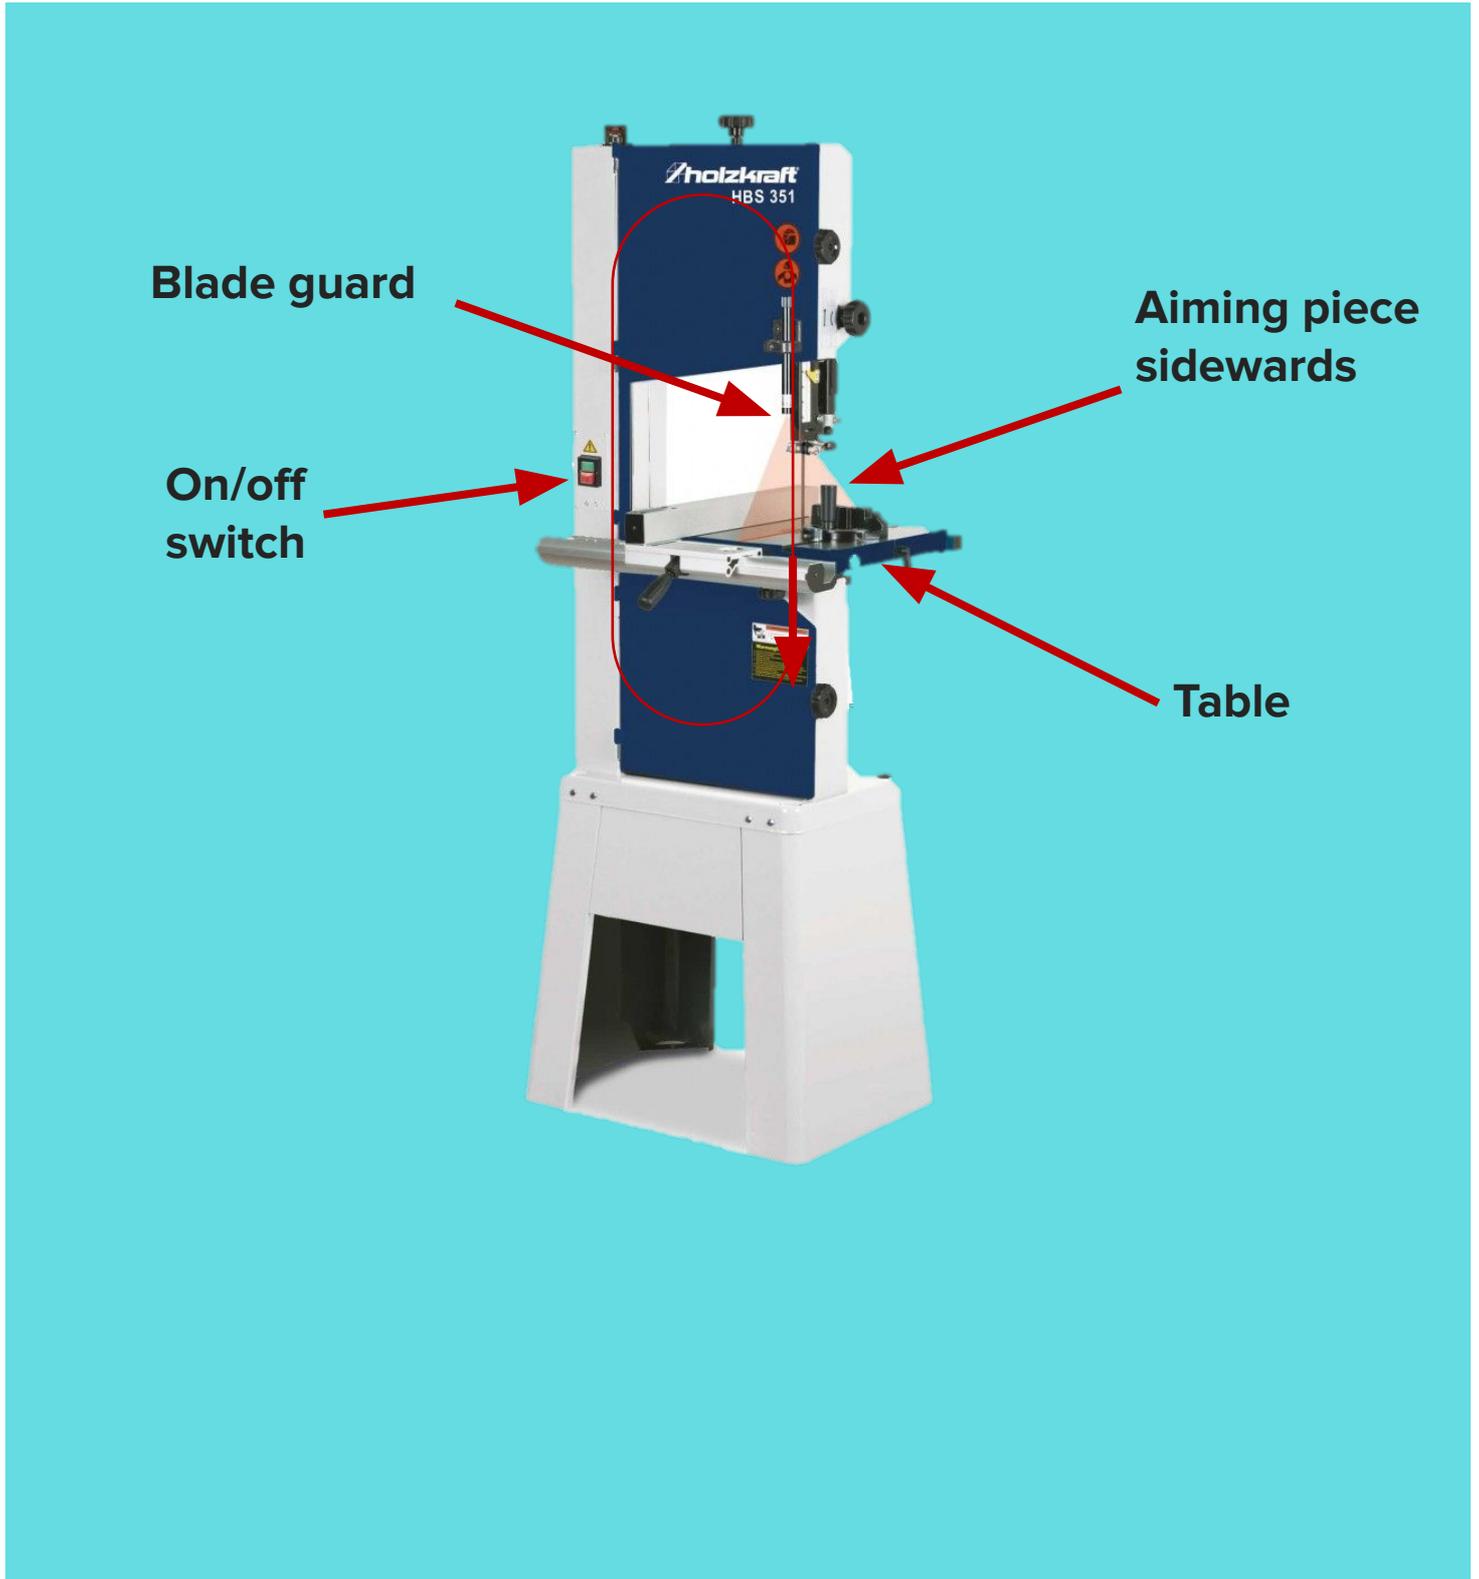


# BLADE

## Blade parts

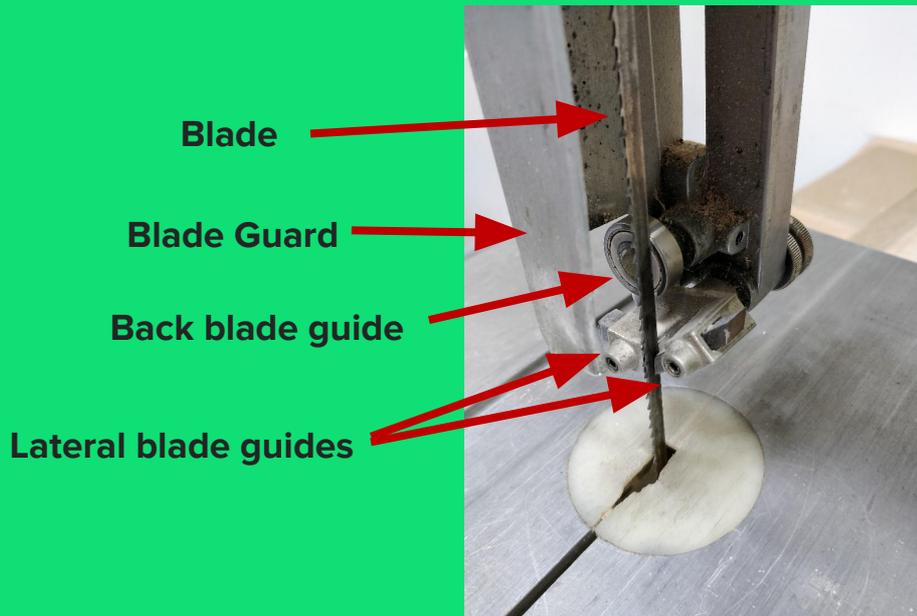

## Push guide

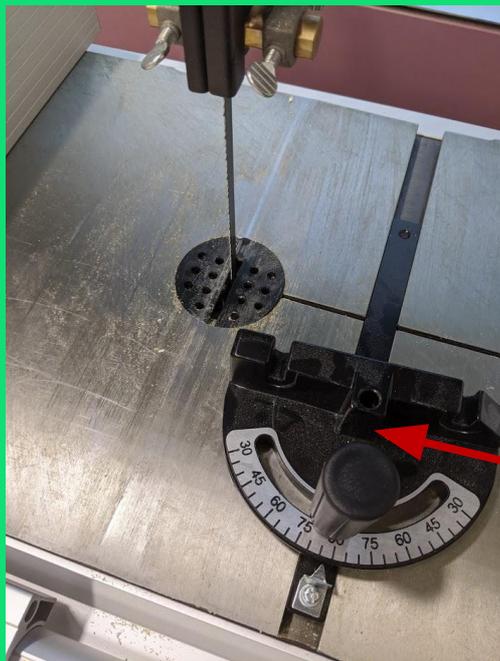

The push guide can be used to cut parts flat perpendicular to saw.

Or to cut a specific angle using the adjustment screw.

It's a good way to keep your finger clear of the blade.


Push guide

# BLADE

## Safe zone

It is important that you always keep your fingers outside this indicated triangle.

If needed use a piece of scrap to push your part.

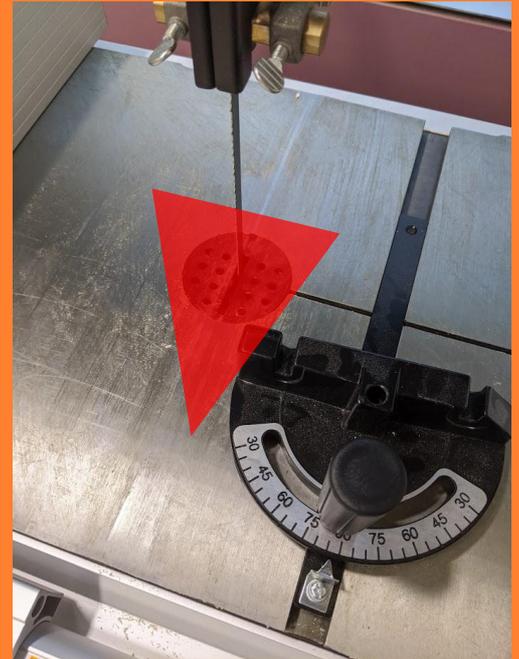

## Blade guard

The blade guard can be adjusted on the right.

Always have the guard set to a height of 5-10 mm above your workpiece.

This will increase safety and quality of your work.



# CUTTING AT AN ANGLE

By adjusting the angle of the table cuts at an angle can be made.

**Caution! Be careful the push guide is not getting in the way of cutting.**

Set the table back to 0° tilt after use.

Table angle

