

PROJECT HOUSE

Bosch GCM 8 SJL

User Manual


14.03.2019

Safety Rules

Do NOT touch the saw blade
Do NOT wear gloves,
watches and jewellery
Cut only wood
Clean after usage
Use the ventilation




Terms

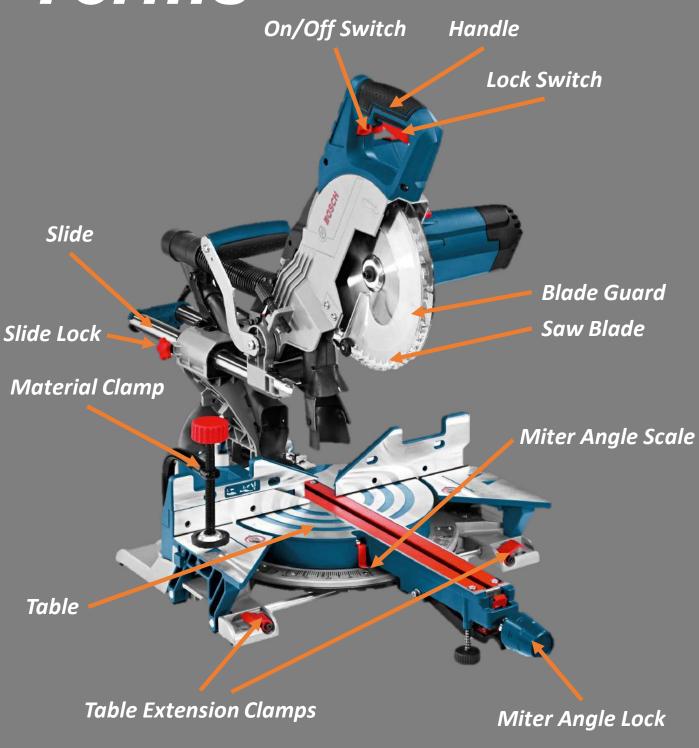

Workpiece Holding

Always use the material clamp to fix the workpiece before cutting!

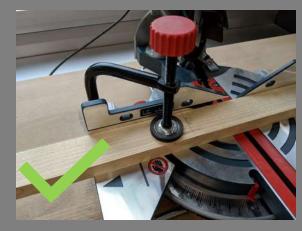


NEVER hold the workpiece with your hand close to the saw blade!



For longer workpieces, use the table extensions





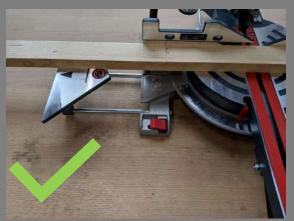


Alignment

Use the laser to see where the workpiece will be cut.

Laser Switch



The laser ray shows you the left side of the final cut

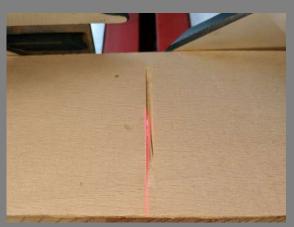

Cutting

Short cuts

Grab the handle with one hand

Press the On/Off-switch and the lock-switch

Push the handle down slowly



Long cuts

Loosen the slider lock – you can now move the slieder

Start cutting at the front and push the handle towards the end of the machine until your cut is completed







Miter Angle

Miter Detent Lever

Open the miter angle lock

Press the miter detent lever

Rotate the table



Miter Angle Lock

Use the miter angle indicator to set the required angle



Close the miter angle lock

Bevel Angle Bevel Clamping Lever

Open the bevel clamping lever



Adjust the bevel angle using the bevel angle scale

Close the bevel clamping lever



IMPORTANT: Move the adjustable fence to the left







STUDENT PROJECT HOUSE