

Prusa I3 FDM 3D Printer



- *FDM Style Printer*
- *Build volume 25 x 21 x 20 cm*
- *Up to 0,05 mm layer height*
- *Materials: PLA, PETG*
- *Other materials on request*

PLA

*Biopolymer
Hotend: 180 – 210 °C
Heatbed : 50 – 70 °C
Small amount of warping
Easy to print
Sensitive to temperature*


PETG

*Modification of PET
Hotend: 220 – 240 °C
Heatbed: 80 – 100 °C
A bit of warping
Fairly easy to print
Not sensitive to temperature
Best of both worlds*

Terminology

Infill

- Parts are not solid
- Most of the time 15% is enough

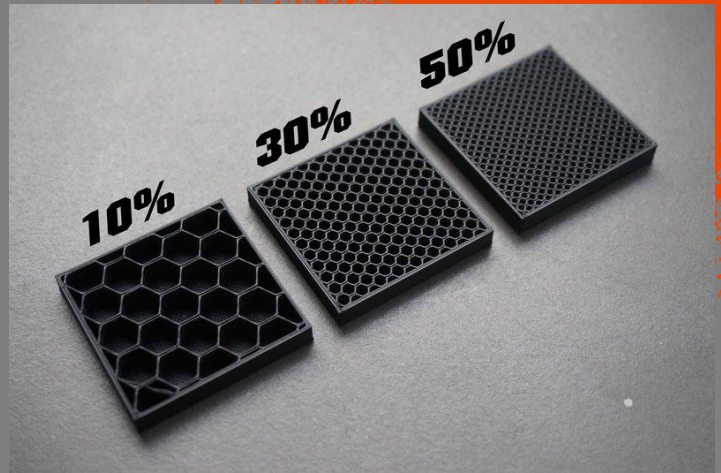

Supports

- Machine can't print mid-air
- Supports the print above
- Threshold value 45°



Brim

- Needed if only a small area of contact to the bed is available to increase contact area
- Prevents lifting of the part from the print bed




PrusaSlicer



Base view


- Open PrusaSlicer
- Make sure the Simple mode is activated
- Drag and drop your .stl on the print bed

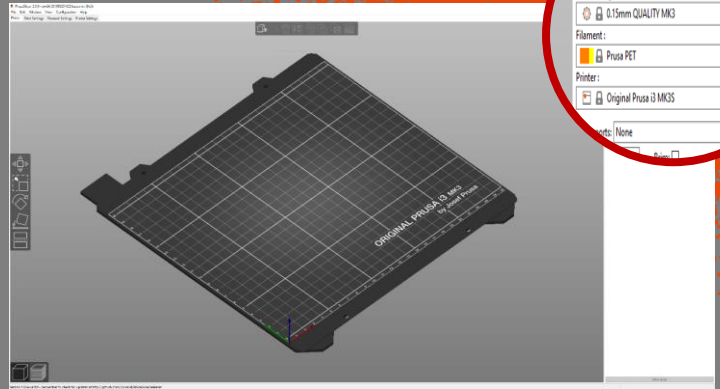

Transformations

Move

Use this to move your part around on the build plate

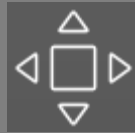

Scale

This tool can be used to make a part bigger/smaller



Rotate

With this tool you can rotate your part around the x,y and z axis



Place on face

Select a face and the software will place it on the build plate



Cut

This tool lets you cut your part into two




PrusaSlicer




Add more

- Use the buttons on the top to add, copy, paste and auto arrange parts

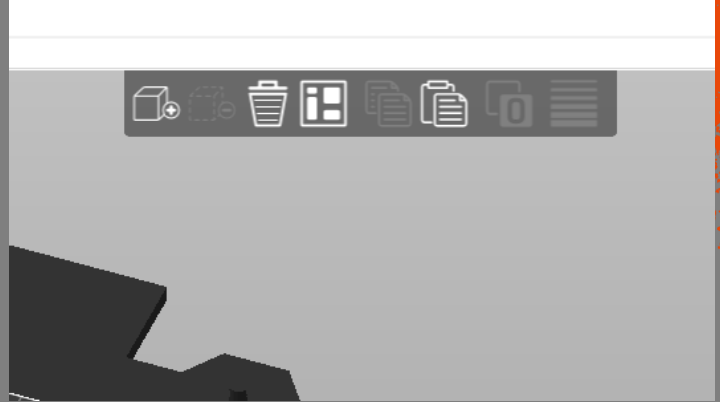


Machine

- First you have to select the correct machine
- The machine type can be found on the red label attached to the machine

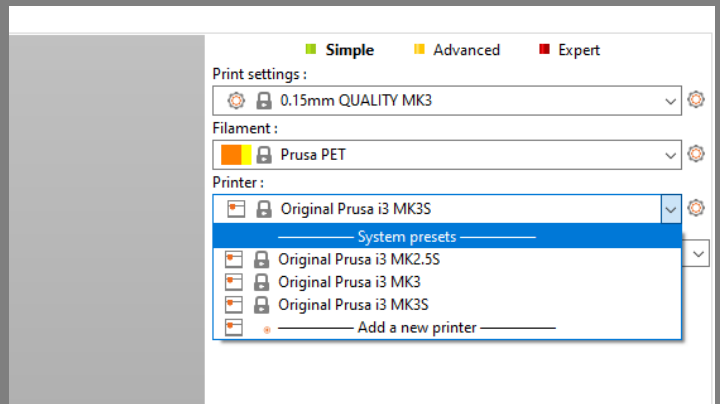

Layer Height

- Next select the desired layer height/print quality
- Smaller layer heights take longer to print

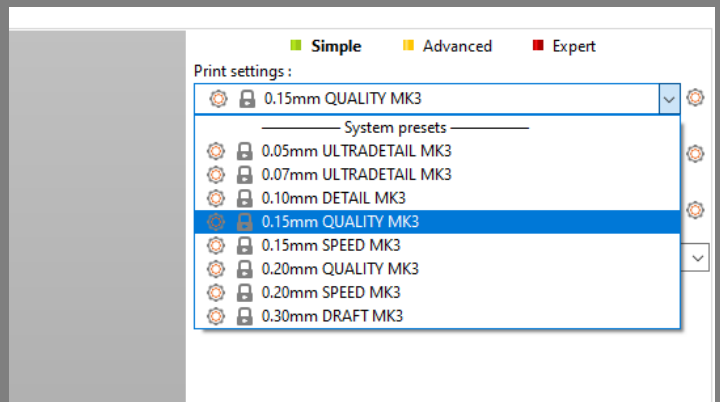


PrusaSlicer




Material

- Now you can select your print material
- The color does not make a difference
- Please use Prusa PLA/ABS/PET

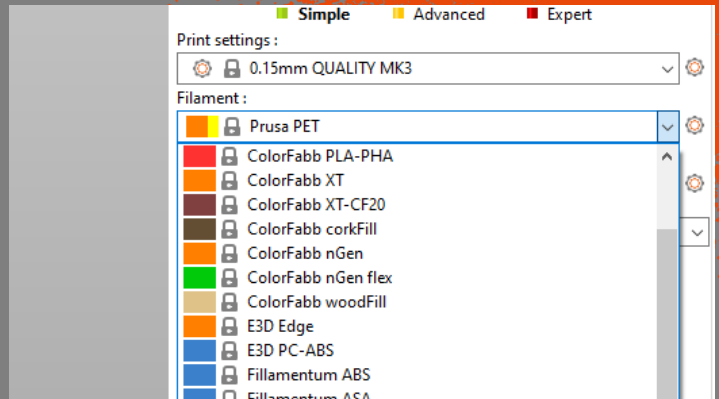


Supports

- Set your desired support setting
- For beginners only use None/Everywhere

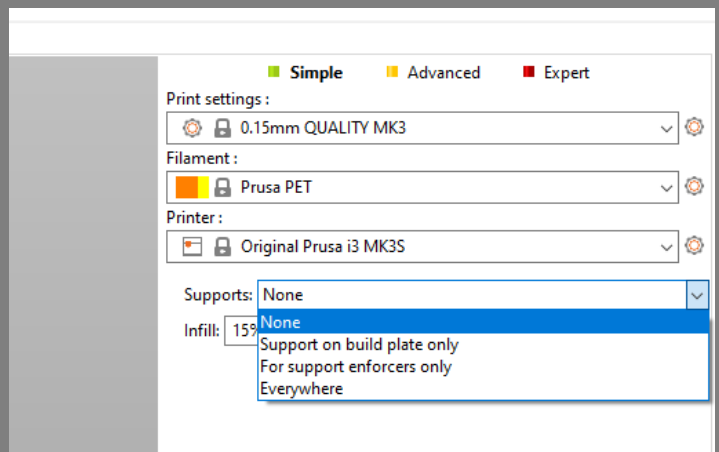

Infill

- Set your infill percentage
- More infill means more weight, longer print times and higher costs
- For most parts 15% is fine

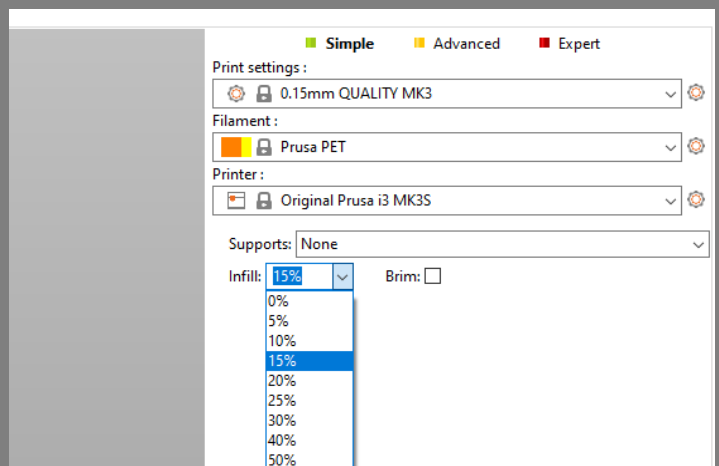


PrusaSlicer




Slice

- Use the Slice now button to prepare your part for printing

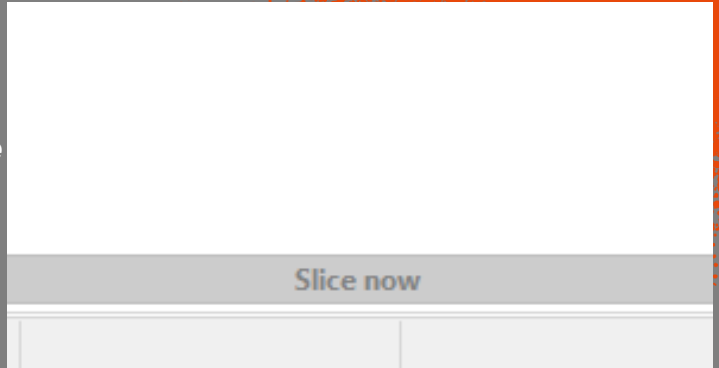


Preview

- Use the slider on the right to go through the different layers
- Check that at no point something is appearing out of nothing

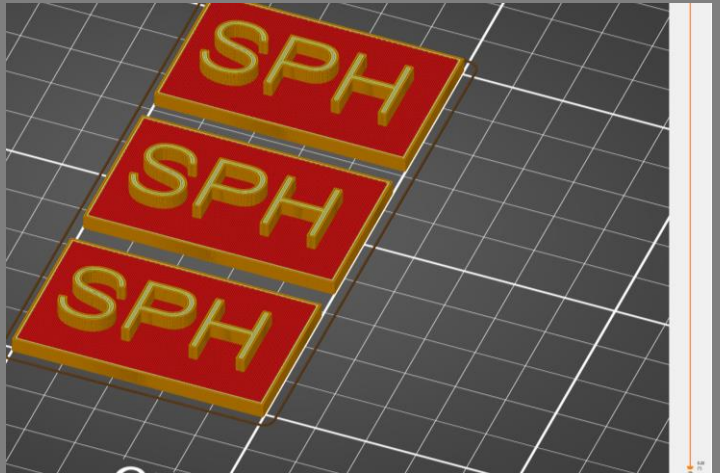

Print Info

- On the lower right corner you can see some information about your print
- Make sure that there is enough filament left for your print
- Use the Export G-code button to export the code and save it on the SD card
- Note: The costs are not correct

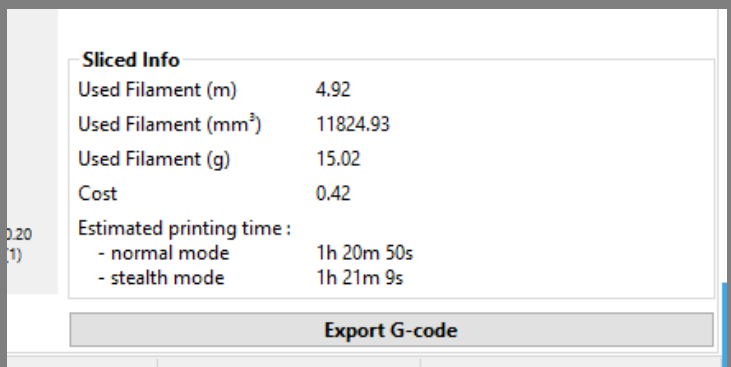

At the Machine

Step 1

- Turn on the Machine at one of the terminals

Step 2

- Make sure the correct and enough filament is loaded

Step 3

- Press the encoder wheel on the printer once – navigate to “Print from SD”

```
⊙ 24/0°      Z 0
⊠ 24/0°      *100%
SD---%       0--:--
Prusa i3 MK2 ready.

*Info screen  +
Preheat      →
Print from SD →
Load filament
```


Step 4

- Choose your part (usually the first one in the list) and press the wheel once more to start the print

```
*Main +
aussendeckel.gcode
snaphalter.gcode
Lidarclip+rassf deck
```

Step 5

- Check the height of your first layer
- When the layer is too high/low please contact a Makerspace Manager

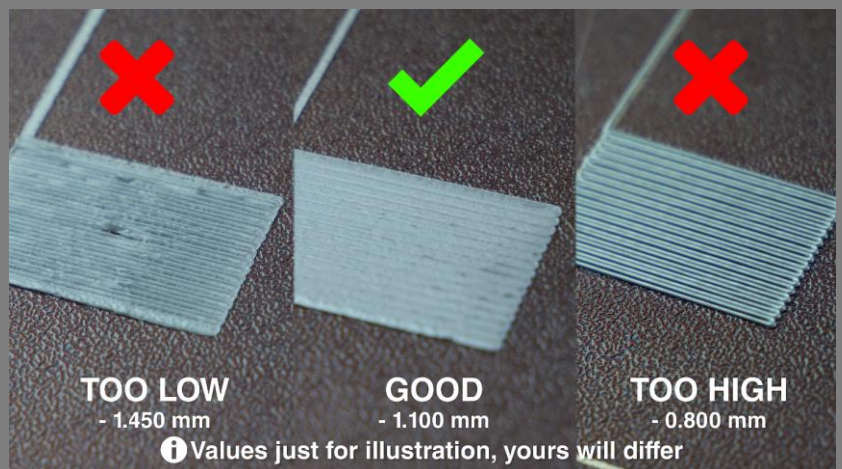

How to change the filament

Step 1

- Press the encoder wheel on the printer once – navigate to “Preheat”
- Choose the temperature according to the filament with the higher melting temperature

```
>Main
PLA  - 215/60  →
PET  - 230/85  →
ASA  - 260/105 →
```

Step 2

- As soon as the Nozzle is up to temperature, hold on to the filament and press the encoder wheel on the printer once – navigate to “Unload filament”

Step 3

- Press the encoder wheel again to select “Unload filament”, now pull firmly on the filament until it is all the way out of the printer
- Secure the end of the filament on the filament roll!

```
Preheat      →
Print from SD →
Load filament →
>Unload filament →
```



Step 4

- Cut the new filament at an angle and insert it into the extruder
- Press the encoder wheel on the printer once – navigate to “Load filament” and press the wheel again. Now you should feel how the filament gets pulled in



Step 5

- If the color of the filament is clear, choose “Yes” in the upcoming prompt if not, choose “No”, more filament gets extruded. The printer will ask you again until you choose “Yes”

```
Filament extruding &
with correct color?
>Yes
No
```